

Connecting a Video Cassette Recorder on digital cable

This type of connection let you record a program on digital cable with your VCR while watching another program on analog channel on your television.

1. Use a **RF** cable to connect the television to the terminal. The cable must go from the **RF OUT** connector of the terminal to the **CABLE IN** or **ANTENNA** input of the television.
2. Disconnect the cable between the **TO TV/VCR** and **CONV IN** connectors behind the terminal.
3. Connect a **RF** cable between the **TO TV/VCR** connector of the terminal and the **CABLE IN** or **ANTENNA** input behind the VCR.
4. Connect a **RF** cable between the **CONV IN** connector of the terminal and the **CABLE OUT** or **TO TV** connector behind the VCR.
5. Use the **VIDEO SOURCE** key while in **CABLE** mode on the remote control to swap between analog cable (from your VCR) and digital cable.

WARNING! For optimal video quality, it is strongly recommended to use a **S-VIDEO** cable for video and **RCA** cable for audio

