

Connecting a Video Cassette Recorder on analog cable

This type of connection let you record a program on analog cable while watching another digital channel on your television

1. Use a **RF** cable to connect the television to the terminal. The cable must go from the **RF OUT** connector of the terminal to the **CABLE IN** or **ANTENNA** input of the television.
2. Disconnect the cable between the **TO RF IN** and **RF IN** connectors behind the terminal.
3. Connect a **RF** cable between the **TO RF IN** connector of the terminal and the **CABLE IN** or **ANTENNA** input behind the **VCR**
4. Connect a **RF** cable between the **RF IN** connector of the terminal and the **CABLE OUT** or **TO TV** connector behind the **VCR**
5. Use the **VIDEO SOURCE** key while in **CABLE** mode on the remote control to swap between analog cable (from your **VCR**) and digital cable.

